



mellerware®

Tweety
HAIRDRYER PRO 2000



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
2000W

CE
2 YEAR
GUARANTEE

Model:
WB20130

PLEASE READ ALL INSTRUCTIONS BEFORE USE



2 year guarantee





Dear customer,

Many thanks for purchasing a MELLERWARE product. Thanks to its technology, design and operation and the fact that it goes through strict quality controls - we feel sure you will be entirely satisfied.

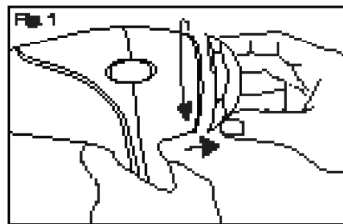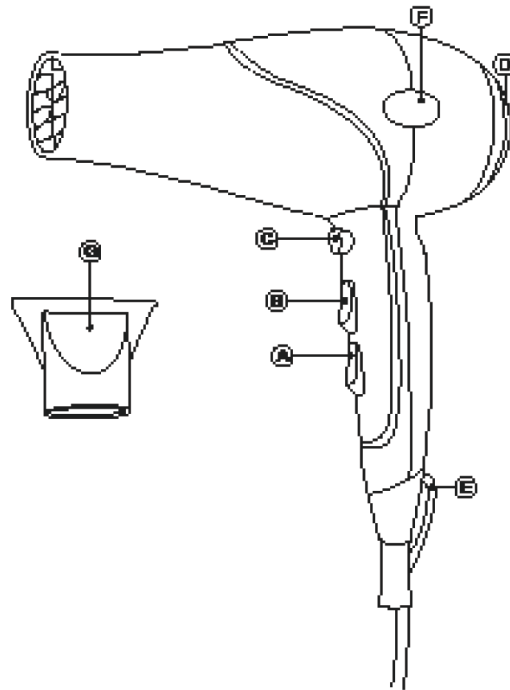

Description

- A Speed selector
- B Temperature selector
- C Blast of cold air button
- D Extractable filter
- E Hanging loop
- F Protective bearings
- G Air concentrator with small nozzle
- H Professional diffuser





Safety advice and cautions

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.

Place of use or work:

- Do not use lacquer or sprays with the appliance turned on.
- Do not use aerosols with the product turned on.

Electrical safety:

- Do not use the appliance if the cable or plug is damaged.
- Ensure that the voltage indicated on the nameplate matches the mains voltage before plugging in the appliance.
- Connect the appliance to a socket that can supply a minimum of 16 amps.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Do not use or store the appliance outdoors.
- Do not leave the appliance out in the rain or exposed to moisture. If water gets into the appliance, this will increase the risk of electric shock.
- If any of the appliance's casing breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- **WARNING:** Keep the appliance dry.
- **WARNING:** Do not use the appliance near water.
- Do not use the appliance near bathtubs, showers or swimming pools.
- Do not use the appliance with damp hands or feet, or when barefooted.
- Do not force the electrical wire. Never use the electric wire to lift up, carry or unplug the appliance.
- Do not wrap the cable around the appliance.
- Do not allow the electric cable to get stuck or bent.
- Do not allow the electric cable to come into contact with hot surfaces on the appliance.
- Check the condition of the electric cable. Damaged or knotted cables increase risk of electric shock.
- As additional protection for the electrical installation that provides electricity to the appliance, the use of a differential current appliance with maximum sensitivity of 30mA is recommended. Consult a qualified installation technician.
- Do not touch the plug with wet hands.

Use and care:

- Fully unroll the appliance's power cable before each use.
- Do not use the appliance if the parts or accessories are not properly fitted.
- Do not use the appliance if the on/off switch does not work.
- Disconnect the appliance from the mains when not in use and before undertaking any cleaning task, adjustment, recharge or change of accessories.
- This appliance is not for professional or industrial use, it is intended for household use only.
- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.
- This appliance should be stored out of reach of children and/or the disabled.
- Make sure that the fan grill on the appliance is not blocked by dust, dirt or other foreign objects.
- Do not use the appliance to dry pets or animals.
- Do not use the appliance to dry textiles of any kind.
- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Instructions for use

Before use:

- Remove the protective wrapping from the appliance.
- Make sure that all the product's packaging has been removed.

Use:

- Completely unroll all the cable before plugging in.
- Connect the appliance to the mains.
- Point the appliance for directing the airflow in the direction desired.
- Slide the speed selector (A) from the OFF position to the highest level in order to increase the airflow.
- Slide the temperature selector (B) from the lower to the upper position to increase the temperature of the airflow.
- The hairdryer has a cold air blast (C) Air concentrator with narrow nozzle
- Add the concentrator to guide the flow of air to a determined part (ends, curls, etc.)

Once you have finished using the appliance:

- Turn off the appliance by switching the speed selector to 0.





- Unplug the appliance from the mains.

Thermal Safety Protector

- The appliance has a safety trip switch that protects the appliance from overheating.

Cleaning

- Unplug the appliance from the mains and let it cool before starting any cleaning.
- Clean the electrical appliance and cable with a damp cloth and dry them afterwards.

NEVER SUBMERGE IN WATER OR ANY OTHER LIQUIDS.

- Clean the equipment with a damp cloth with a few drops of washingup liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.
- Do not let water or other liquid enter through the air holes to avoid damage in the operative interior parts of the appliance.
- It is very important to maintain the extractable filter (D) as well as the interior grille clean.
- To clean the interior grille take off the extractable filter (D) turning it lightly in an anti clockwise direction (Fig 1).
- Once cleaning has finished place the grille in its original position by fitting the three tabs in the three slots situated on both sides of the grille while turning lightly in a clockwise direction.

Anomalies and repair

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.
- If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

